


Guide to dealing with the awkward task of fitting new leather around Olympus OM1 and OM2 self timers without removing the timer which is not a nice design and is a pig to reassemble!!


When it comes to fitting the leather to the left face of the camera front DO NOT REMOVE the self-timer!!!

You'll never get it back on and will perhaps have to take it to a repair shop to get it sorted out...so let us help you to avoid having to do that, it's fiddly but not difficult.

Snip Here as Shown

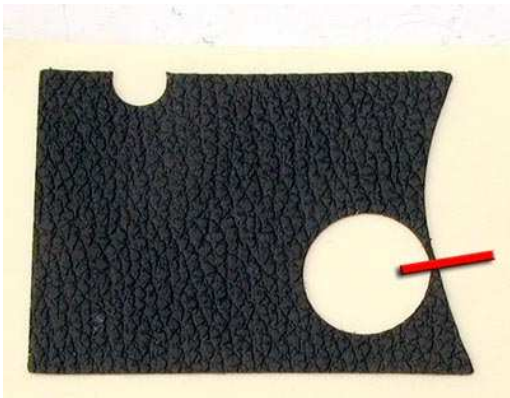

Lick and wet the red area...this will delay adhesion and permit you to work on the positioning...

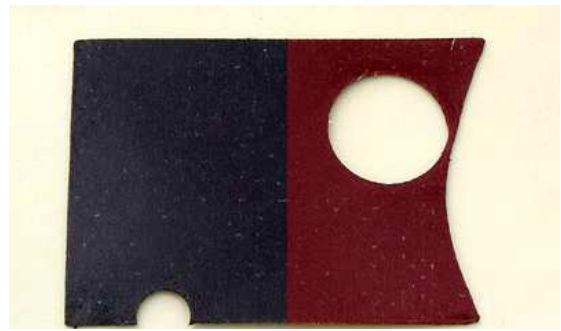

Next part the gap and work the leather in around the lever, it actually needs to slide underneath the black plastic washer so start to do that here and now...

Use a blade or a really small screwdriver to encourage it under and ensure the leather sits nicely against the lens mount and is straight within the space.

Finally, just smooth it down around all the fitted edges being careful at all times not to damage the surface.

It is best once everything is fitted, to just leave the camera to dry for 24 hours.

